

LSR2000 C860 Series - Edge-Lit LED Sortie Sign

AC, AC/DC and Self-Powered models

IMPORTANT SAFEGUARDS

When using electrical equipment, basic safety precautions should always be followed including the following:

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

1. Do not use outdoors.
2. Do not let power supply cords touch hot surfaces.
3. Do not mount near gas or electric heaters.
4. Equipment should be mounted in locations and at heights where it will not readily be subjected to tampering by unauthorized personnel.
5. The use of accessory equipment not recommended by the manufacturer may cause an unsafe condition.
6. Do not use this equipment for other than intended use.
7. All servicing should be performed by qualified service personnel.

SAVE THESE INSTRUCTIONS

Installation Instructions

1. Turn off AC power.
2. Route an unswitched AC circuit of rated voltage into the junction box and leave 6" of wire length.
3. Remove the proper knockout in the canopy plate to mount to the junction box - check the orientation of the back box (see fig. 2).
4. Route the wires through one of the Ø5/8" knockout hole in the canopy plate and mount the plate to the junction box using the junction box screws. Make sure that the securement screw is accessible.
5. Remove the proper knockouts in the back box for mounting to the canopy.
6. Mount the canopy to the back box using the hardware supplied. Insert the threaded nipples through the back box knockouts, canopy and nylon washer. Thread a nut on each nipple; the nuts should be in the canopy (see fig. 2).
7. Route AC wires from the chassis assembly through the knockout hole in the back box and out into the canopy.
8. Attach incoming ground to the short ground wire provided in the back box.
9. Connect the long ground lead with the eyelet from the back box and terminate on the post on the chassis assembly with hardware provided.
10. Make the proper connections. Our system can accept input voltages of 120 VAC to 347 VAC. Therefore, connect the purple (hot) and white (neutral) leads to the building utility (see fig. 3).

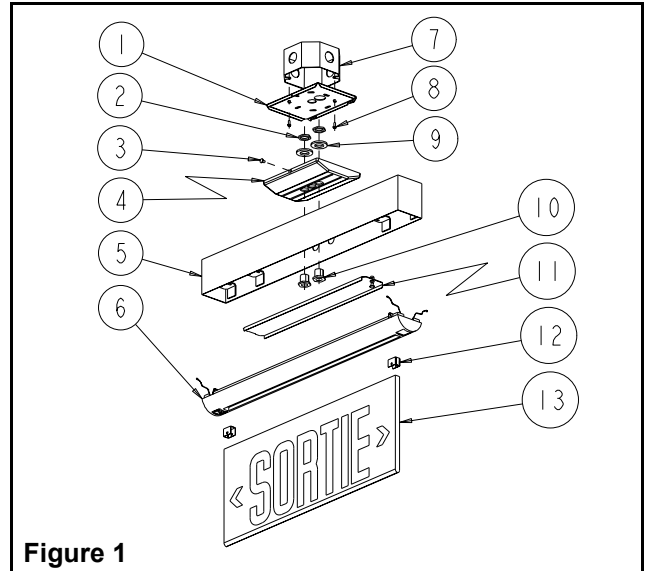


Figure 1

Part List

- | | |
|--------------------------------|---|
| 1. Canopy plate | 8. Junction box screws (2 not supplied) |
| 2. Nut (2 supplied) | 9. Nylon washer (2 supplied) |
| 3. Securement screw | 10. Nipples (2 supplied) |
| 4. Canopy | 11. Chassis assembly |
| 5. Back box | 12. Clips (2 supplied) |
| 6. Trimplate assembly | 13. Sortie panel |
| 7. Junction box (not supplied) | |

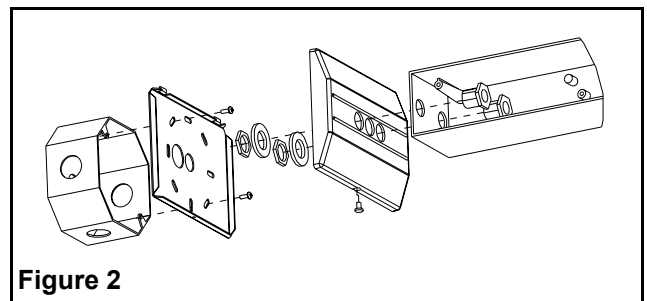


Figure 2

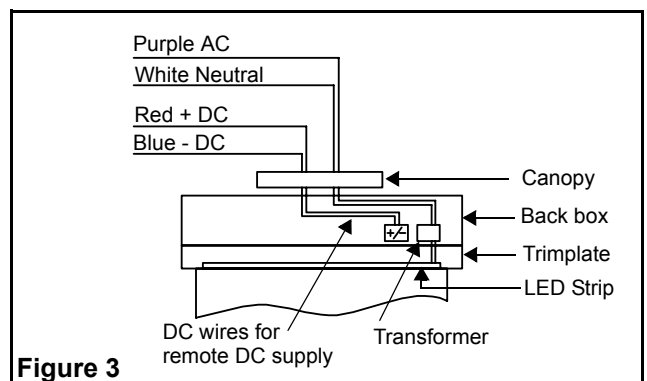


Figure 3

11. Install the chassis assembly into the back box by hinging the plate into the pivot holes and move the plate to the closed position. Push the plunger into the hold down grommet (see fig. 4).
12. Mount the back box to the ceiling by guiding the tabs on the canopy plate into the slots on the canopy. Hinge and secure with the securement screw.

Trimplate installation

1. Remove the sortie panel from its carton, do not remove the protective sleeve until the installation is complete.
2. Compress the retention springs and insert the trimplate assembly in the back box. Push the assembly in place (see fig. 5).
3. Partially remove the protective sleeve from the sortie panel. Push the panel into the slot in the trimplate assembly until it snaps (see fig. 6). Gently try to pull out the panel to ensure that it is engaged in the trimplate assembly. Remove the protective sleeve.
4. Energize AC circuit. Legend and red pilot indicator (self-powered models), will illuminate.

AC/DC Models

Refer to fig. 3 for AC & DC wiring.

For DC portion — Wire the Red lead (+) to the positive DC input voltage and the Blue Lead (-) to the negative DC input voltage. Note: DC input voltage range is 6 volts to 48 volts.

Testing (Self Powered Models)

Press illuminated test switch (see fig. 7). Legend will flicker, but remain lit, AC pilot lamp will extinguish. On release, pilot lamp will illuminate, and automatic charger will restore battery to full charge.

Maintenance

None required. If AC supply to the unit is to be disconnected for 2 months or more, the battery must be disconnected (Self-Powered Models only).

Note — Nickel Cadmium battery units are shipped discharged and may require 10 minutes of connection to AC supply before start-up test procedure, and 24 hours to reach full charge.

